



REFERENCE	POWER	SPEED	CONTROL
CLIP FAN Ø 150 mm	15W/AC	2.100 r/min	2 SPEEDS + STOP
CLIP FAN Ø 150 mm	15W/DC	2.100 r/min	1 SPEED + STOP
CLIP FAN Ø 200 mm	12W/DC	1.800 r/min	1 SPEED + STOP



SAFETY INSTRUCTIONS - GENERAL

Preventing hazards for the user. The appliance is only for domestic use, not for professional use. Without supervision this appliance may not be used by children or persons who have a physical or mental restriction and therefore are not able to use the appliance safely. Have any repairs carried out solely by a qualified electrician. Never try to repair the appliance yourself. The importer can never be held responsible for any consequential loss or damage, or any other consequences, resulting either directly or indirectly from the supply of the appliance by the importer.

SAFETY INSTRUCTIONS - ELECTRICITY AND HEAT

Verify that the mains voltage is the same as that indicated on the type plate on the appliance before use. Plug the appliance into an earthed wall socket. Always remove the plug from the socket when the appliance is not in use. Always remove the plug from the wall socket by pulling on the plug, not the power cord. Check the appliance's power cord regularly to make sure it is not damaged. Do not use the appliance if the power cord is damaged. Have a damaged power cord replaced by qualified service department. When using an extension lead always make sure that the entire cable is unwound from the reel. Use solely approved extension leads. Avoid stumbling over the extension lead or power cord. Make sure that the appliance and the power cord do not come in contact with sources of heat, such as a hot hob or naked flame. Make sure that the switch, the power

SAFETY INSTRUCTIONS - DURING USE

before touching the appliance, power cord or plug. Make sure that objects cannot contact the fan blades. Switch off the appliance and remove the plug from the wall socket in the event of a malfunction during use, and before cleaning the appliance or storing it after use. Remove the plug from the wall socket immediately should the power cord in water or other liquid.

ENVIRONNEMENT

Dispose of packaging material, such as plastic and boxes, in the appropriate waste containers. When this product reaches the end of its useful life do not dispose of it by putting it in a dustbin; hand it in at a collection point for the reuse of electrical and electronic equipment. Please refer to the symbols on the product, recycling or other means of making use of old electrical equipment will make an important contribution to the protection of the environment.

CE DECLARATION OF CONFORMITY

This product conforms to the essential requirements of EU safety directives.